 
 
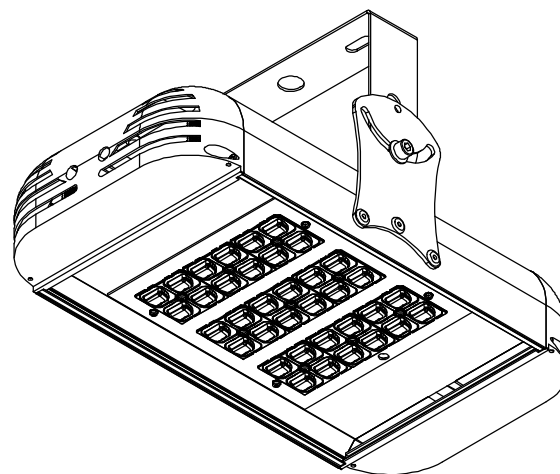 
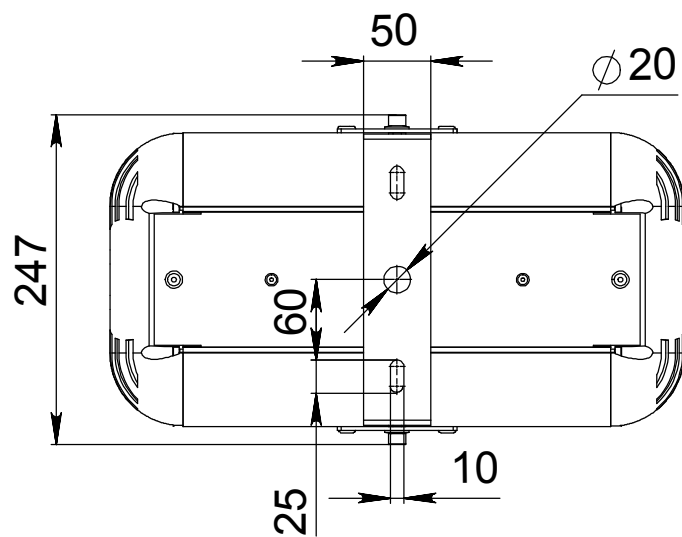 
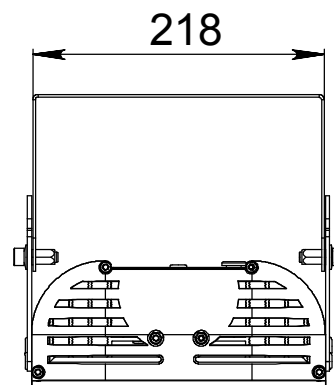 
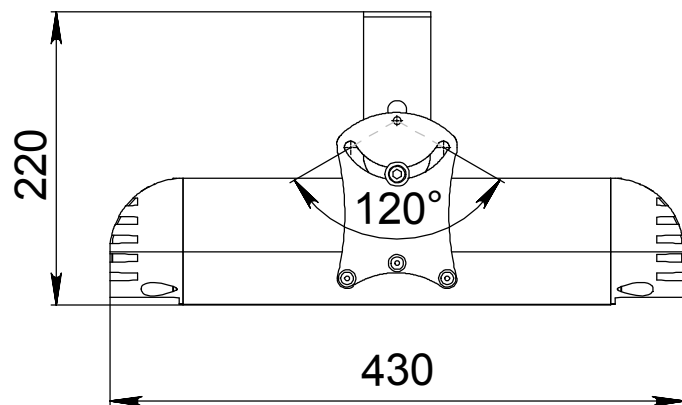 
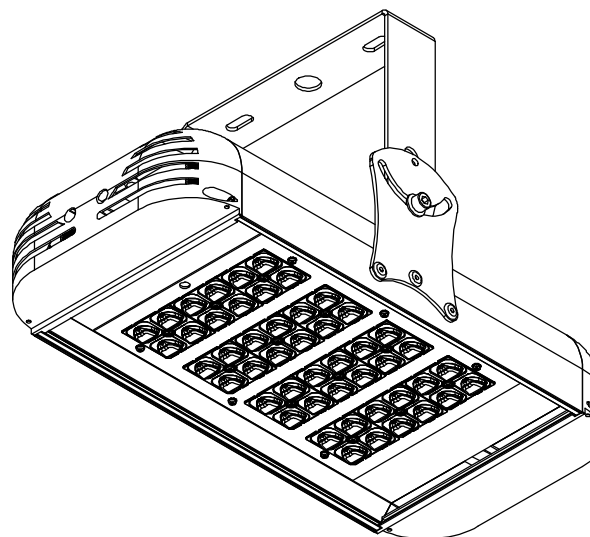 
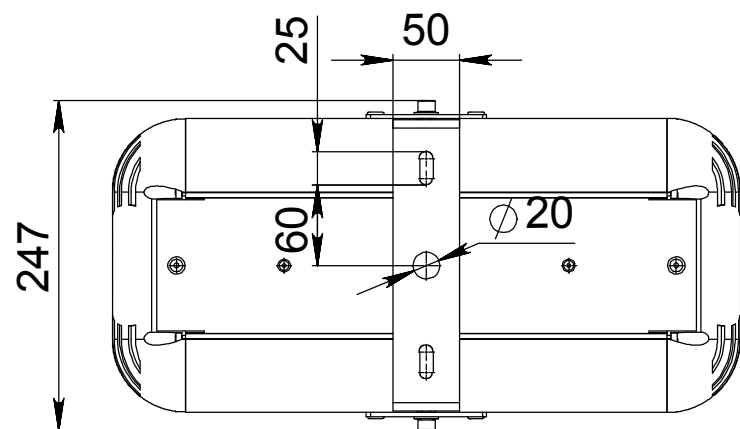 






ДПП 01-78-50  
ДПП 04-78-50

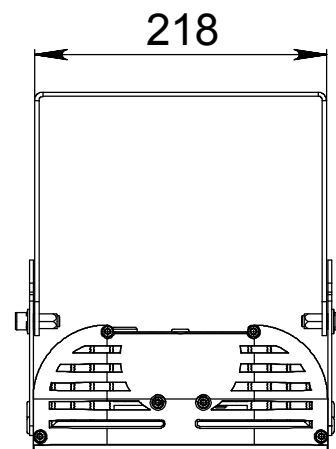





ДПП 01-104-50

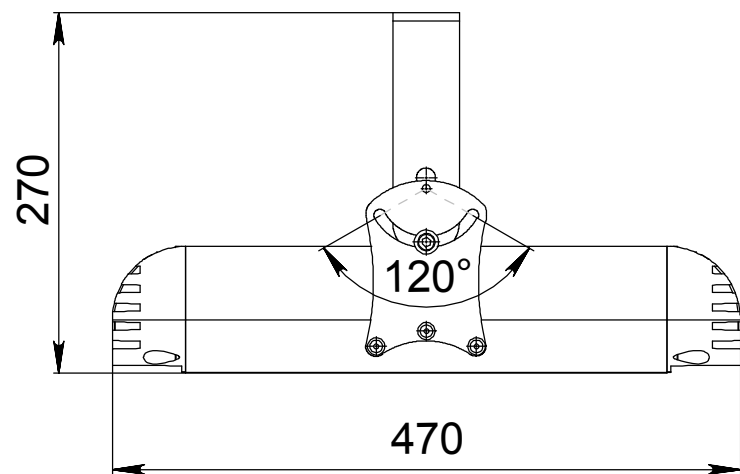

 
 
 
 
ДПП 01-130-50

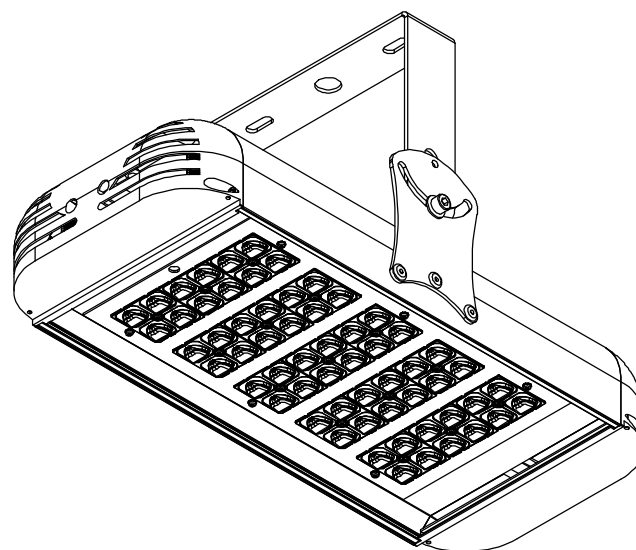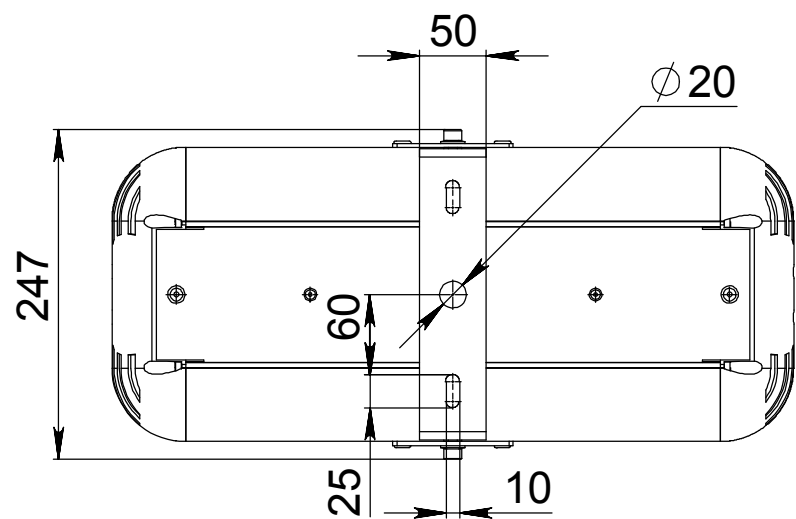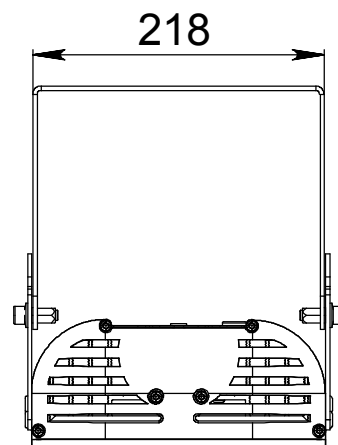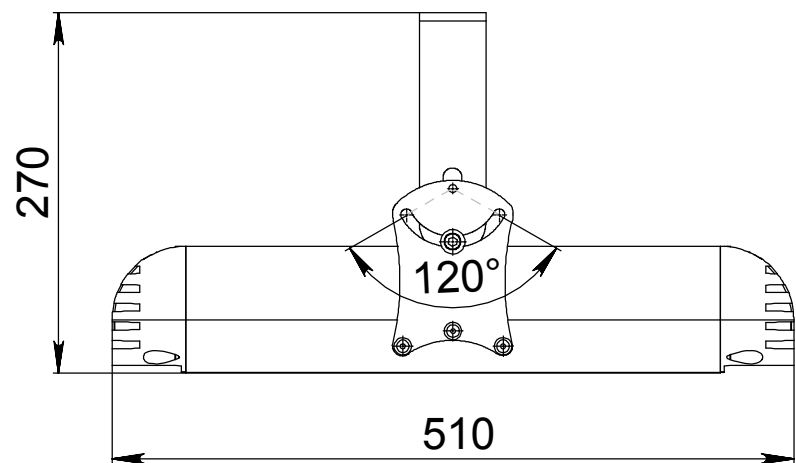


ДПП 01-156-50  
ДПП 04-156-50

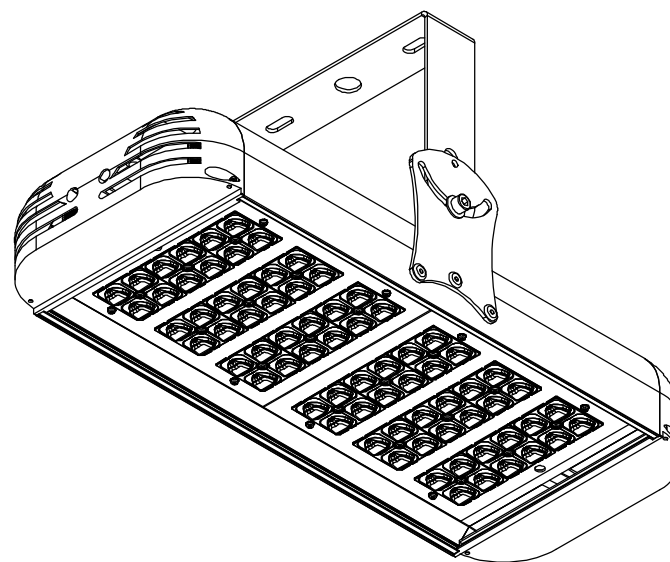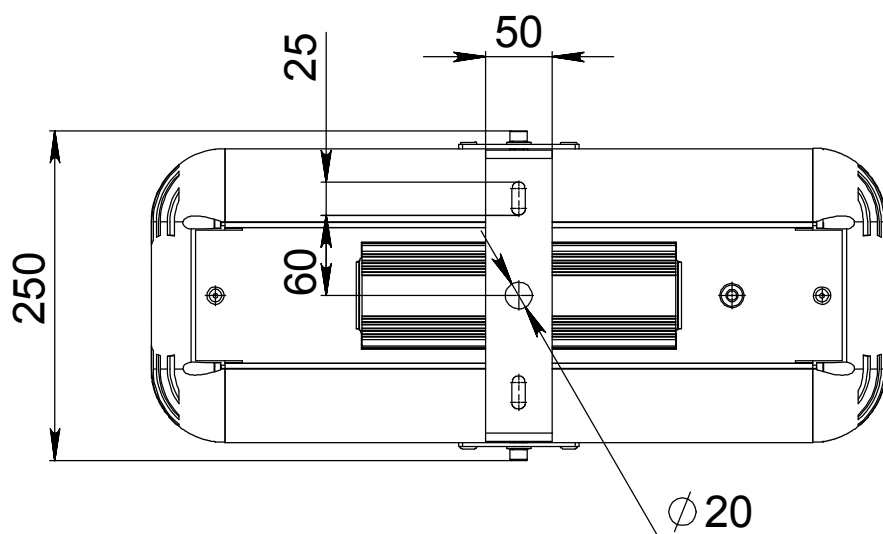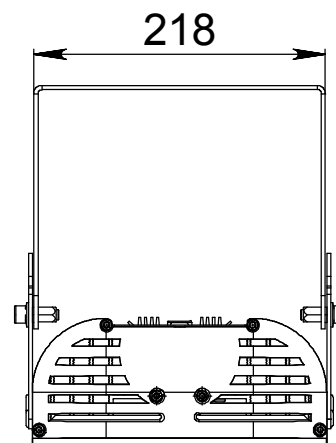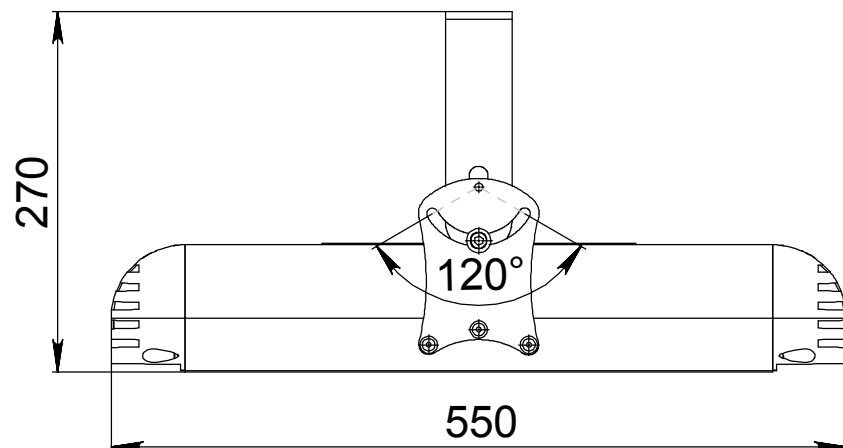    




ДПП 01-182-50

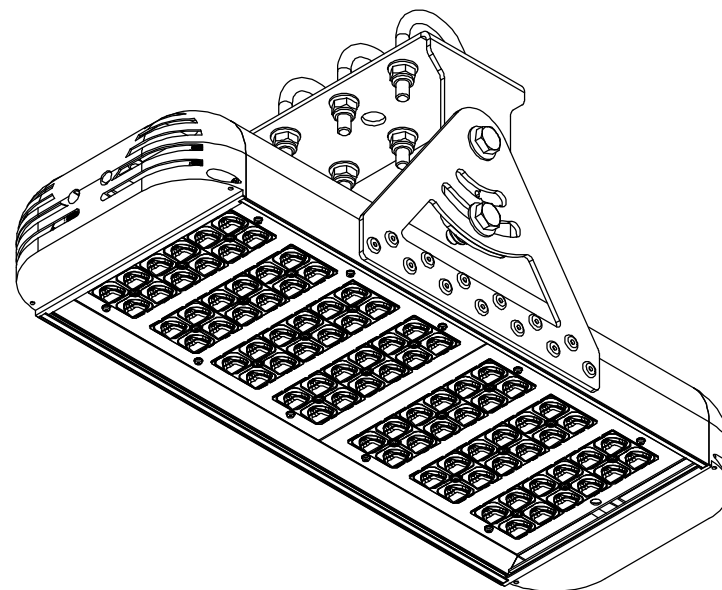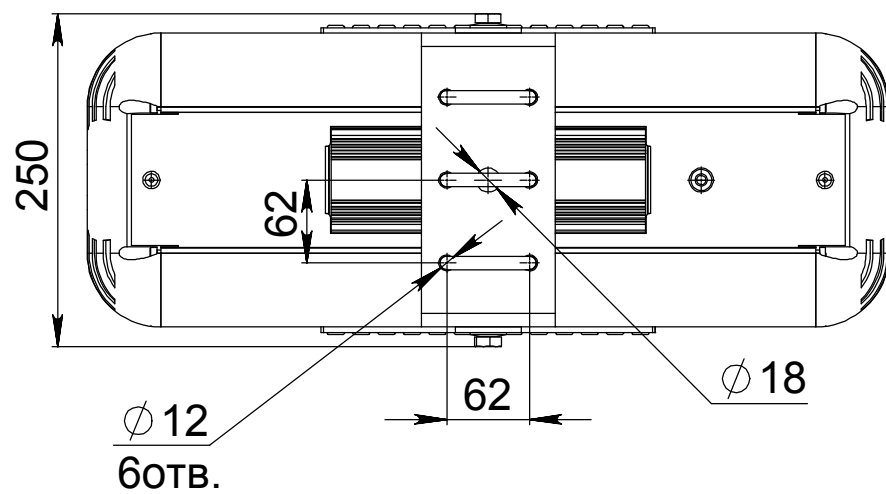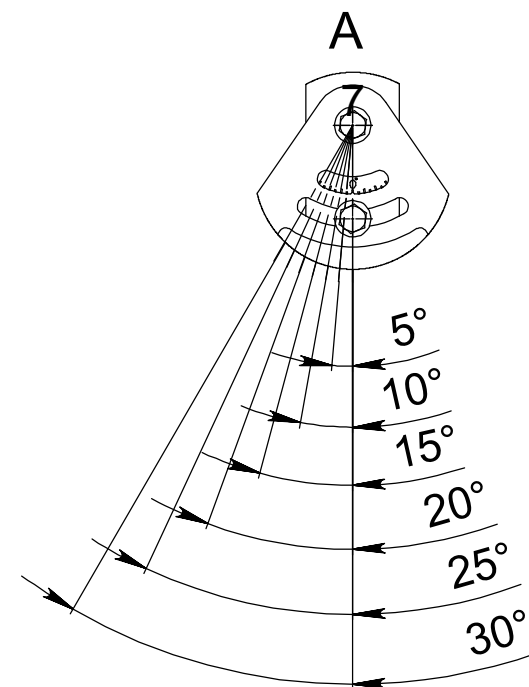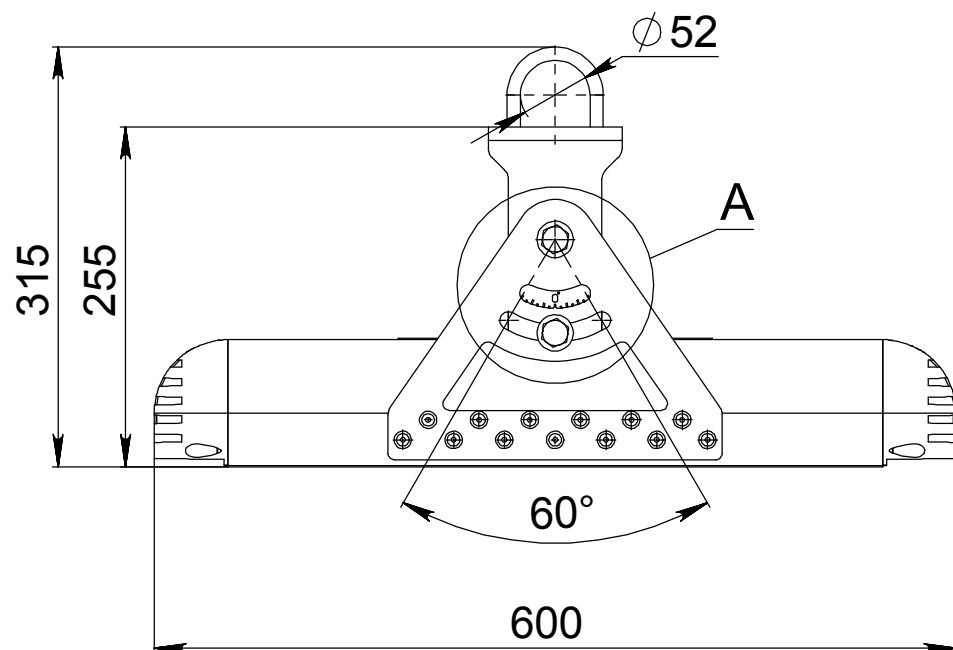    



ДПП 01-208-50

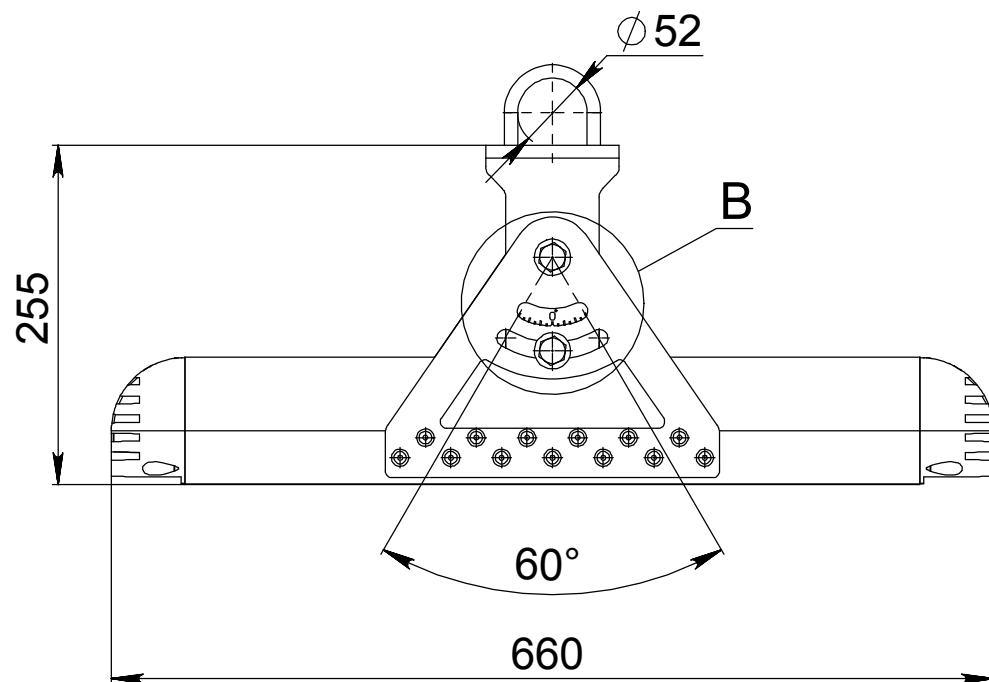 



В (1 : 3)

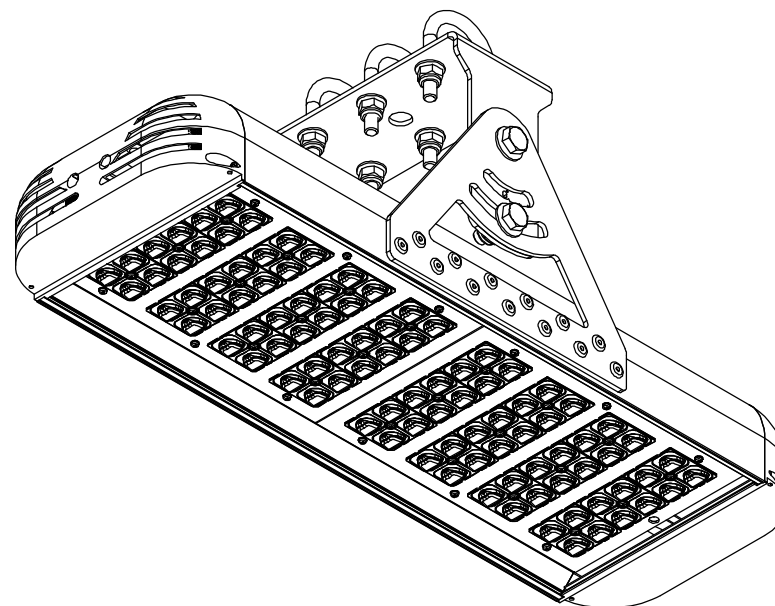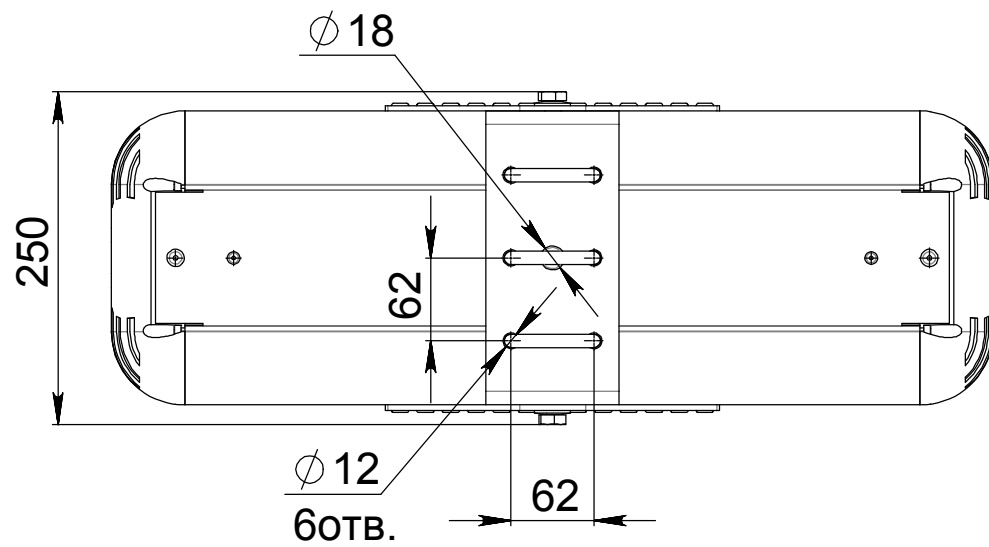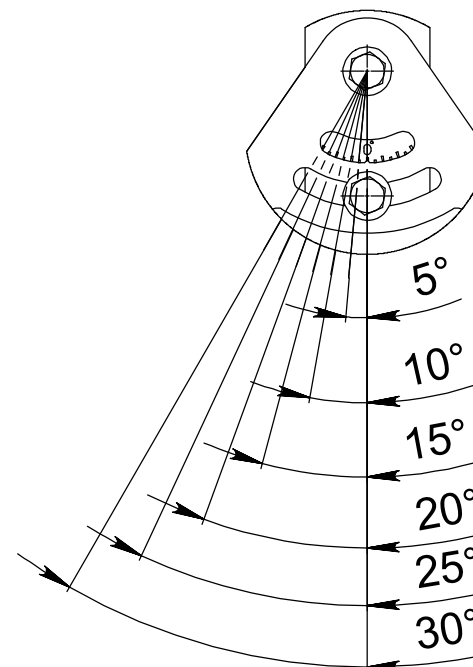   

ДПП 01-234-50



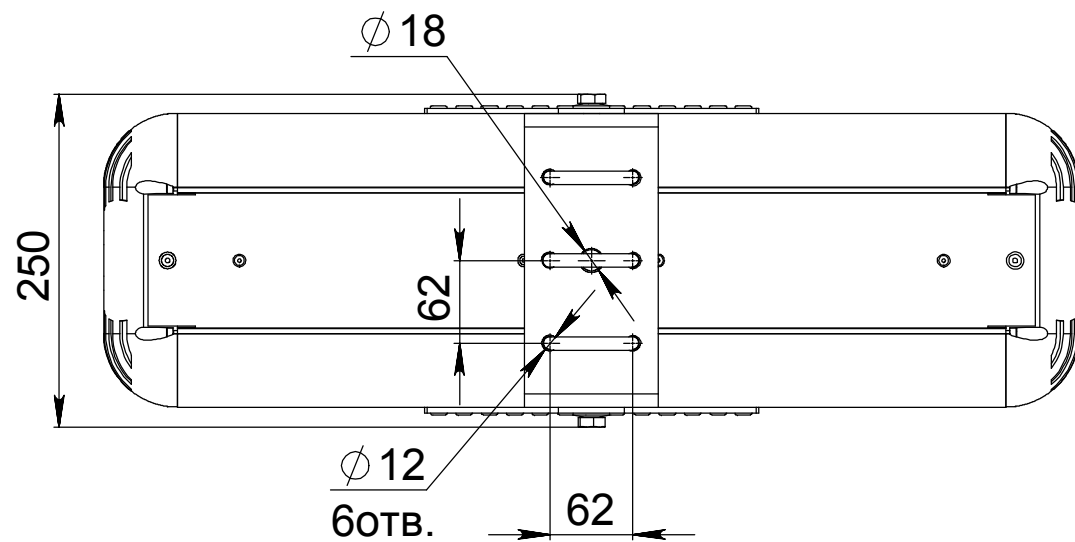 
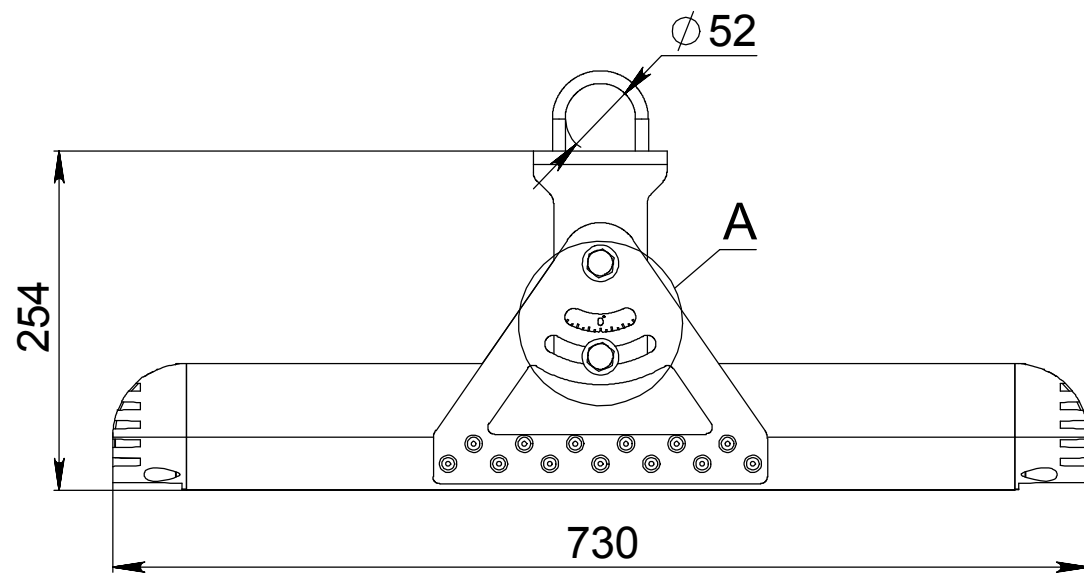 


A



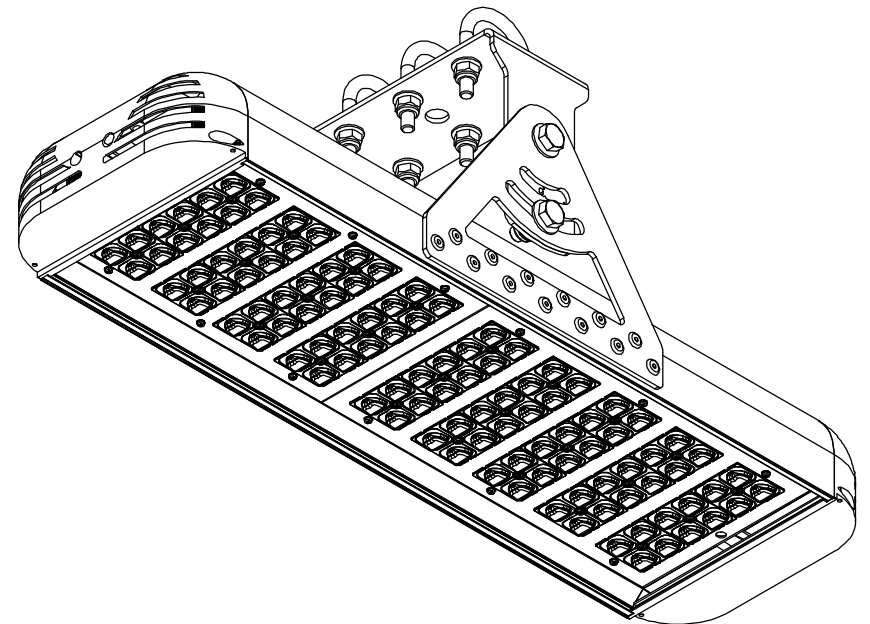 
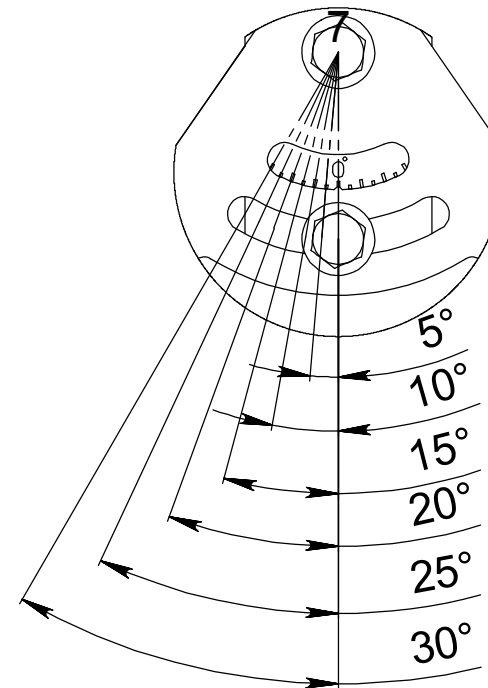 








ДПП 04-52-50

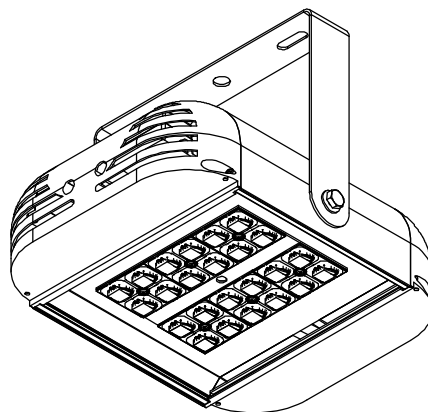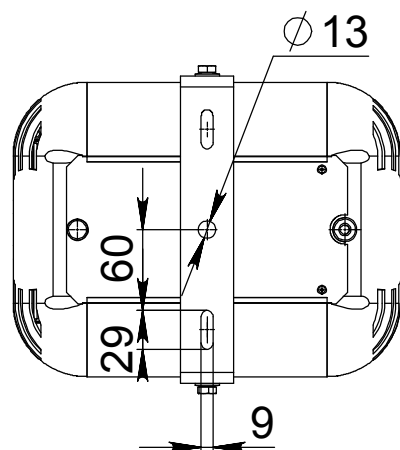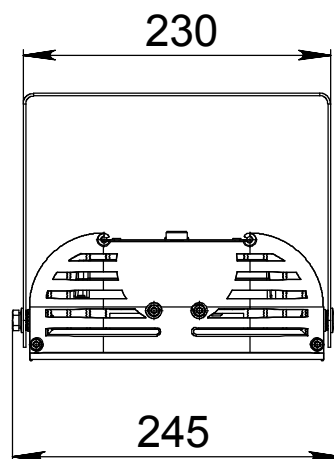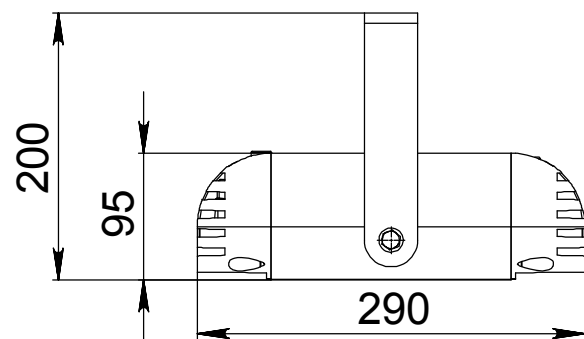    





ДПП 21-78-50

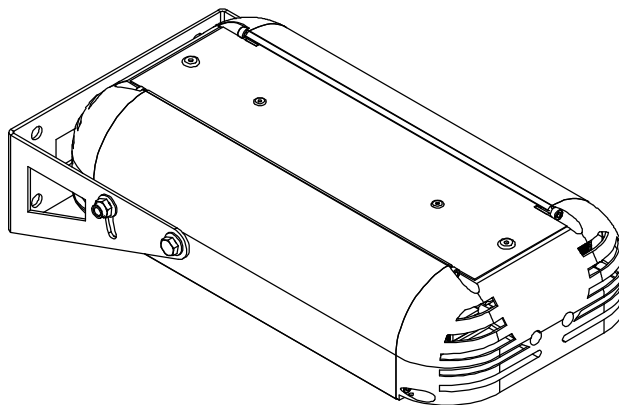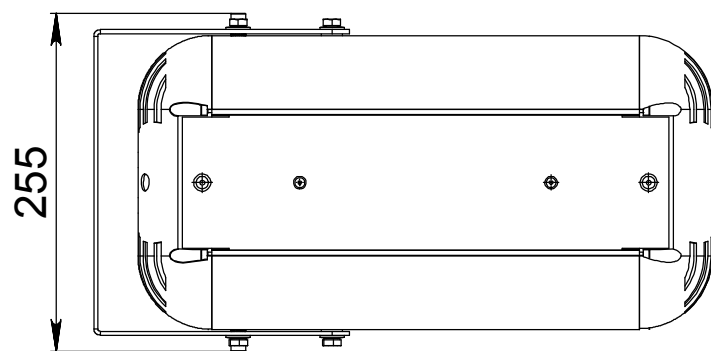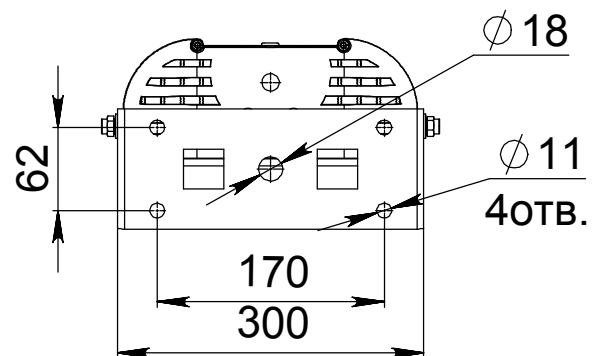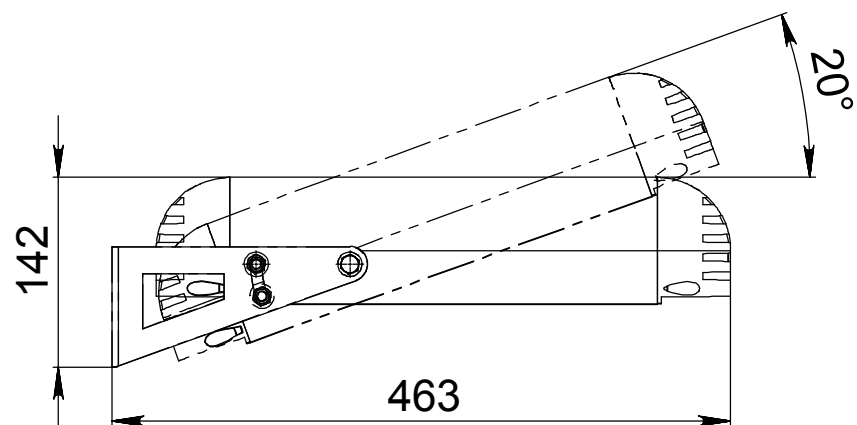    





ДПП 01-260-50

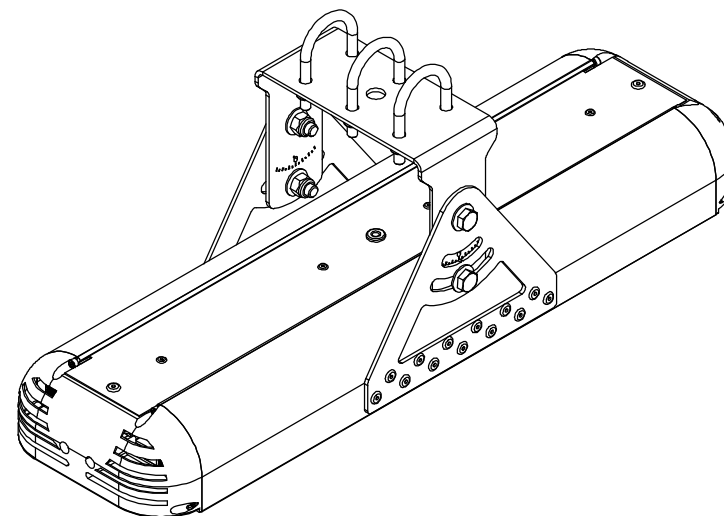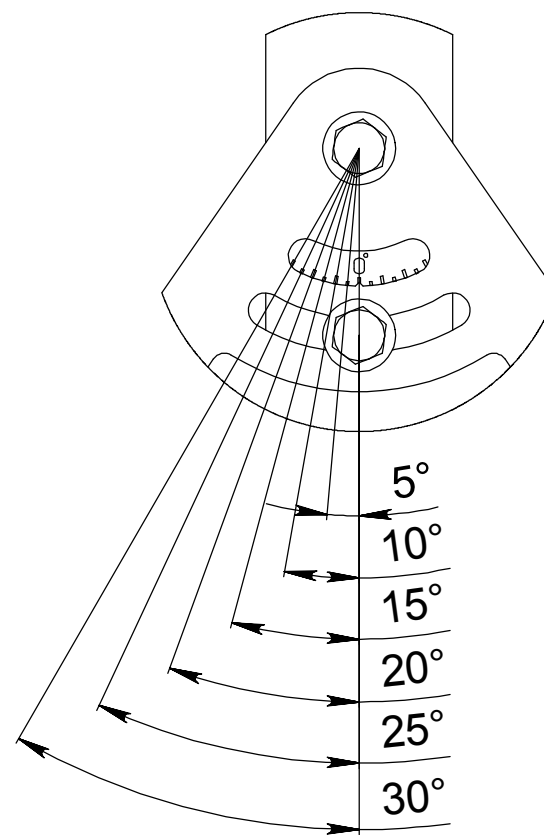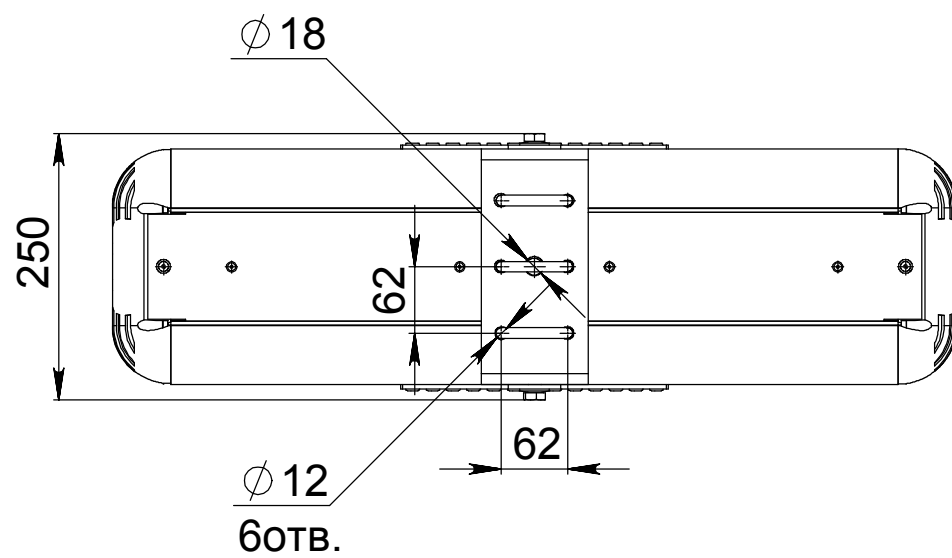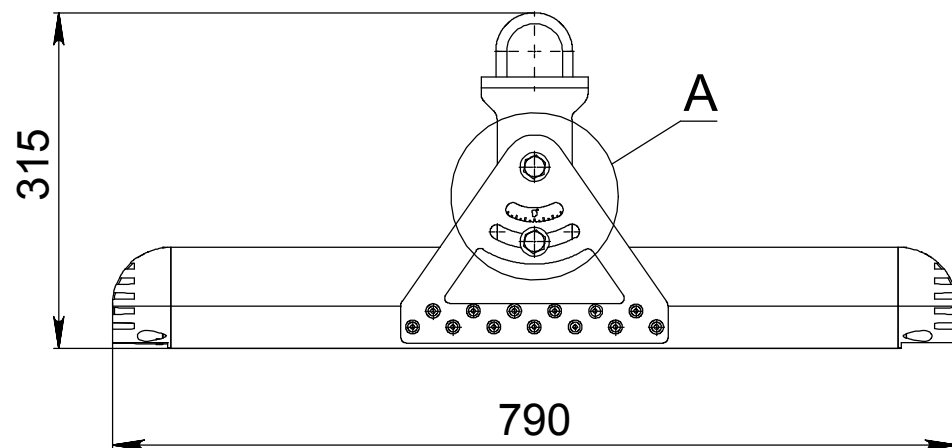    

ДПП 11-108-50

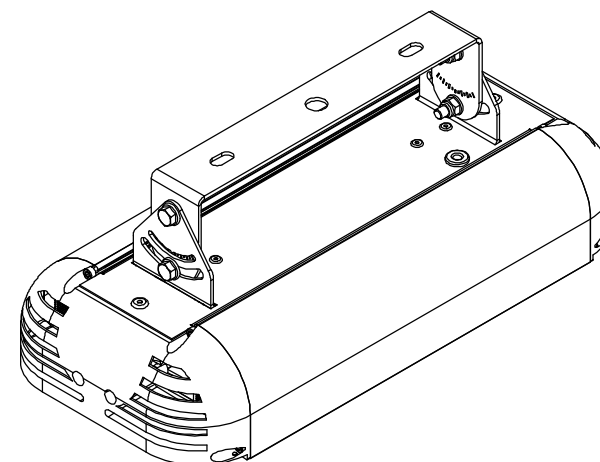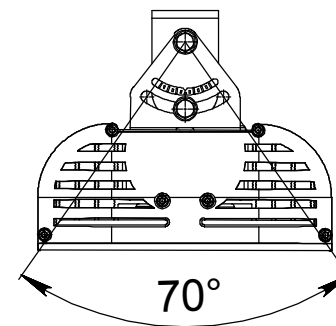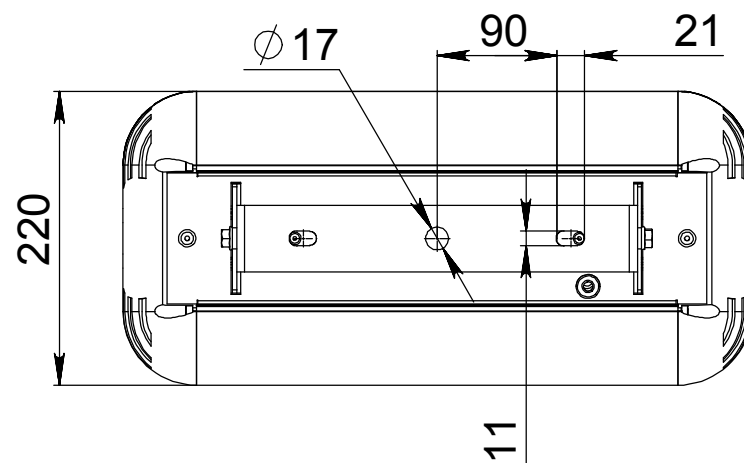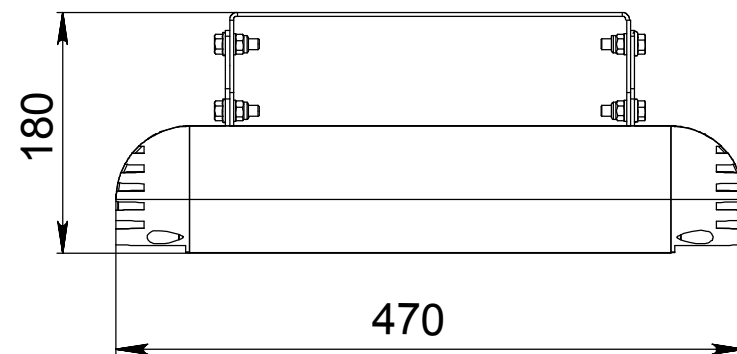    

ДПП 11-130-50

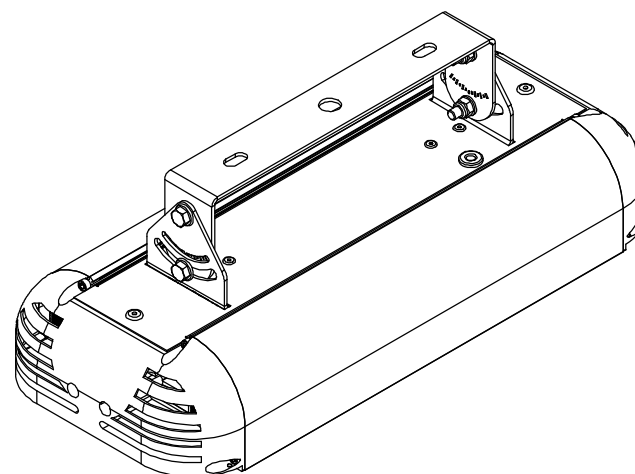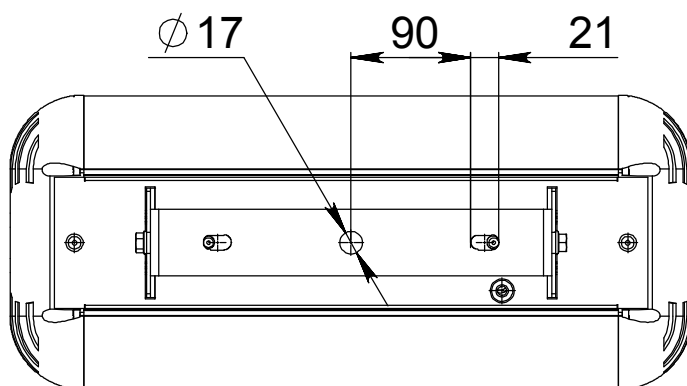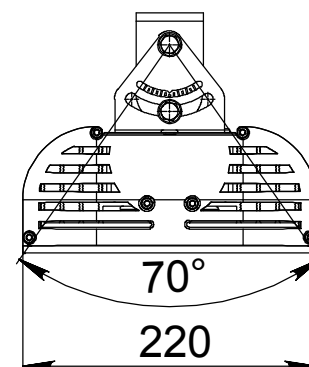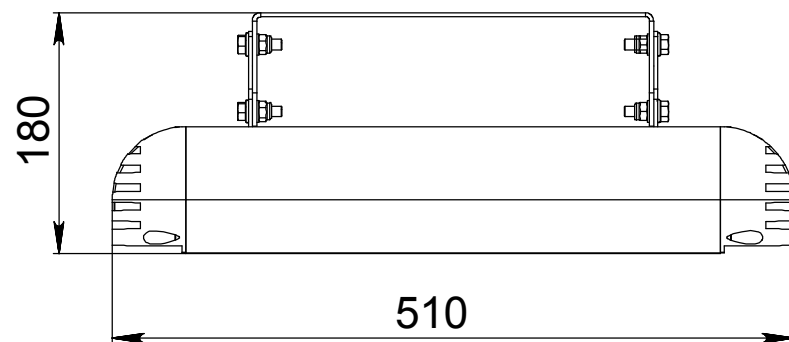    

ДПП 11-156-50

